

String Chart for 34 STRING “Dreamweaver” HEARTLAND HARP

1-----	.025-----	A
2-----	.025-----	G
3-----	.028-----	F
4-----	.028-----	E
5-----	.028-----	D
6-----	.032-----	C-RED
7-----	.032-----	B
8-----	.032-----	A
9-----	.032-----	G
10-----	.036-----	F
11-----	.036-----	E
12-----	.036-----	D
13-----	.040-----	C-RED
14-----	.040-----	B
15-----	.040-----	A
16-----	.040-----	G
17-----	.045-----	F
18-----	.045-----	E
19-----	.045-----	D
20-----	.050-----	C-RED
21-----	.050-----	B
22-----	.055-----	A
23-----	.045/.010-----	G
24-----	.050/.010-----	F
25-----	.050/.010-----	E
26-----	.050/.015-----	D
27-----	.050/.018-----	C-RED
28-----	.050/.020-----	B
29-----	.024/7/.018 SFN-----	A
30-----	.020/5/.008 SFB-----	G
31-----	.020/5/.010 SFB-----	F
32-----	.022/6/.010 SFB-----	E
33-----	.022/8/.010 SFB-----	D
34-----	.024/8/.015 SFB-----	C-RED

IMPORTANT NOTE: Please do not put strings other than the ones designated above on your harp. To do so may cause severe stress on your soundboard, and lead to damaging your harp! To re-order strings, call Vermont Strings at 1-802-244-8564. Strings should be changed every 1-2 years.