

String Chart for

25 STRING "SERENITY" HEARTLAND HARP

1	-----	.025	-----	F
2	-----	.028	-----	E
3	-----	.028	-----	D
4	-----	.028	-----	C-RED
5	-----	.028	-----	B
6	-----	.032	-----	A
7	-----	.032	-----	G
8	-----	.032	-----	F
9	-----	.036	-----	E
10	-----	.036	-----	D
11	-----	.036	-----	C-RED
12	-----	.040	-----	B
13	-----	.040	-----	A
14	-----	.040	-----	G
15	-----	.045	-----	F
16	-----	.045	-----	E
17	-----	.045	-----	D
18	-----	.050	-----	C-RED
19	-----	.055	-----	B
20	-----	.045/.010	-----	A
21	-----	.045/.013	-----	G
22	-----	.045/.015	-----	F
23	-----	.050/.015	-----	E
24	-----	.055/.015	-----	D
25	-----	.055/.018	-----	C-RED

IMPORTANT NOTE: Please do not put strings other than the ones designated above on your harp. To do so may cause severe stress on your soundboard, and lead to damaging your harp!
To re-order strings, call Vermont Strings at 1-802-244-8564. Strings should be changed every 1-2 years.